








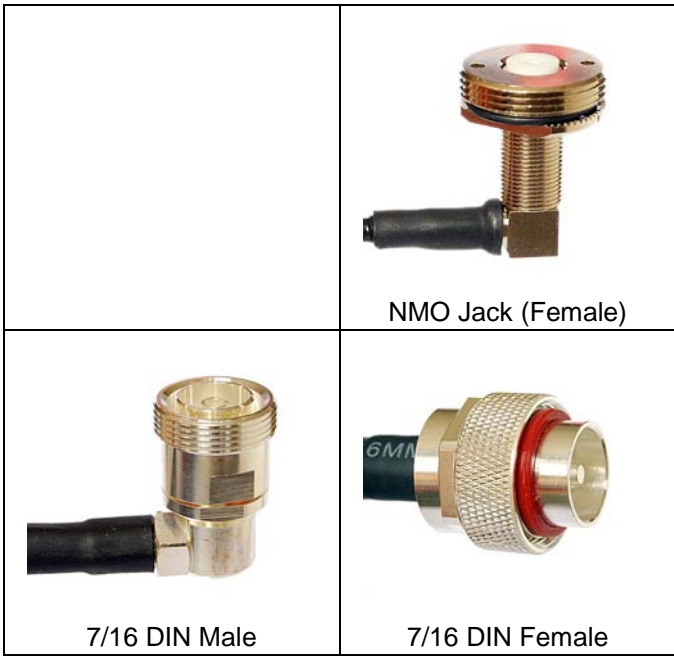
RF Connector Identification Chart

 <p>BNC Plug (Male)</p>	 <p>BNC Jack (Female)</p>
 <p>RP-BNC Plug (Male)</p>	 <p>RP-BNC Jack (Female)</p>
 <p>N-Male</p>	 <p>N Jack (Female)</p>
 <p>SMA Plug (Male)</p>	 <p>SMA Jack (Female)</p>
 <p>RP-SMA Plug (Male)</p>	 <p>RP-SMA Jack (Female)</p>

 <p>TNC Plug (Male)</p>	 <p>TNC Jack (Female)</p>
 <p>RP-TNC Plug (Male)</p>	 <p>RP-TNC Jack (Female)</p>
 <p>FME Plug (Male)</p>	 <p>FME Jack (Female)</p>
 <p>SMB Plug (Male)</p>	 <p>SMB Jack (Female)</p>
 <p>MC Card Plug (Male)</p>	

 <p>MCX Plug (Male)</p>	 <p>MCX Jack (Female)</p>
 <p>MMCX Plug (Male)</p>	 <p>MMCX Jack (Female)</p>
 <p>RP-MMCX</p>	
 <p>UHF Plug (Male) PL-259</p>	 <p>UHF Jack (Female) SO-239</p>
 <p>Mini-UHF Plug (Male)</p>	 <p>Mini-UHF Jack (Female)</p>

 <p>U.FL</p>	
 <p>CRC9 (Huawei) Right Angle Plug (Male)</p>	
 <p>TS-9 Right Angle Plug (Male)</p>	
 <p>F Plug (Male)</p>	 <p>F Jack (Female)</p>
 <p>QMA Plug (Male)</p>	 <p>QMA Jack (Female)</p>



2570 Beverly Drive, 140
 Aurora, IL 60540 USA
 Tel: 630.428.3108 Fax:
 630.585.0657
 sales@air802.com

2102 Av Fermin Vivaceta
 Independencia
 Santiago, Chile
 Tel: 562.455.0975
 Fax: 562.455.0976
 ventas@air802.com

Copyright © 2006-2015 AIR802